
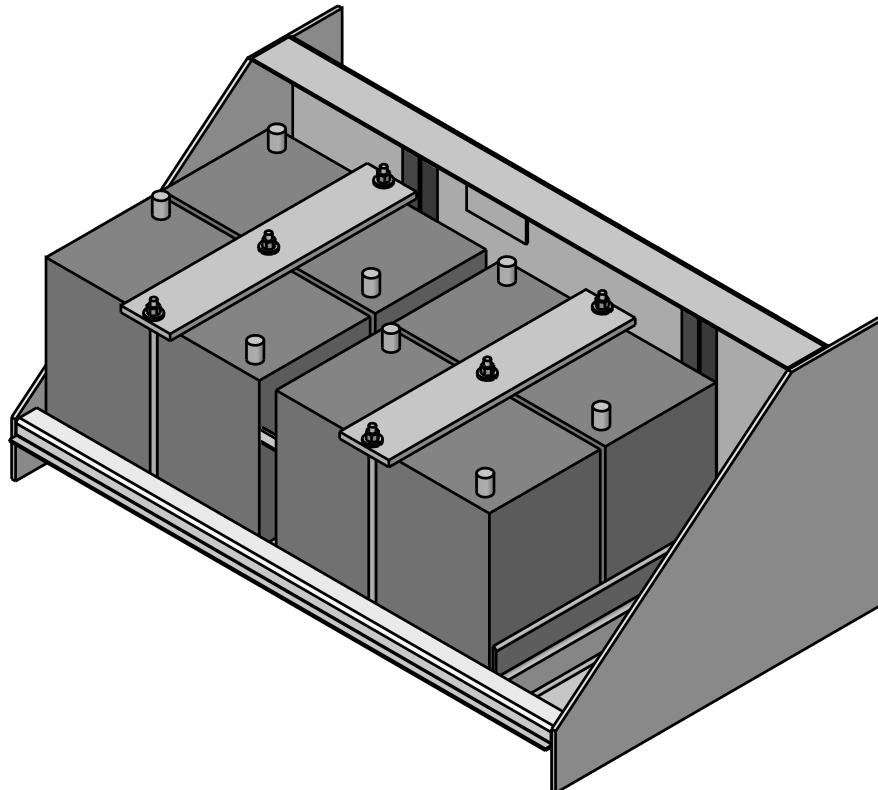


BATTERY MOUNT 6 BOLT KIT INSTRUCTIONS

SIDE PACK

- 1) DRILL 3/8" HOLES IN UHMW STRAPS IN LOCATIONS SHOWN.
- 2) LOCATE BATTERIES IN DESIRED POSITION. ALLOW SPACING FOR L-BOLT BETWEEN BATTERIES.
- 3) MARK AND DRILL 3/8" HOLES THROUGH THE BOTTOM OF THE BOX USING THE UHMW STRIP TO LOCATE THE HOLES.
- 4) INSTALL THE BATTERIES.
- 5) INSTALL WASHERS AND NUTS ONTO L-BOLTS AND TIGHTEN SECURELY.

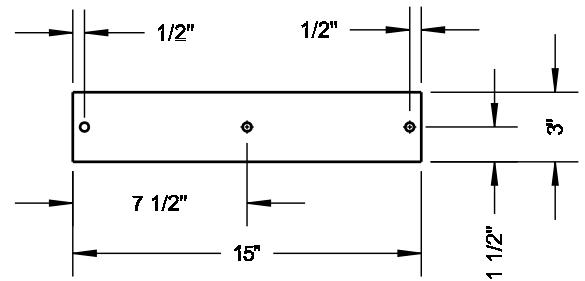

| | | | |
|---|---|---------|-------------------------------------|
| D | 6 | 11-2010 | NUT, LOCK 5/16-18 ZINC NC NYLON |
| C | 6 | 11-0099 | BOLT, BATTERY "L" 5/16-18 x 10.5 |
| B | 2 | 79-3580 | UHMW, STRAP 3/8" x 3" x 15" BATTERY |
| A | 6 | 11-7035 | WASHER, FLAT 5/16 SAE ZINC |

| REVISION | LTR | DATE | DESCRIPTION | BY | SCALE | DWN BY: TRK | REF #: | WEIGHT | TITLE |
|----------|-----|------|-------------|----|-------|-------------|--------|--------|----------------------------|
| | | | | | NONE | | | | |
| | | | | | | | 3508 | | KIT, BATTERY MOUNT 6 BOLT |
| | | | | | | | | | INSTRUCTIONS |
| | | | | | | | | | DATE 3/19/09 DWG LSRSD0106 |
| | | | | | | | | | Rev |

RECOMMENDED MAINTENANCE:
CHECK ALL MOUNTING BOLTS FOR PROPER TORQUE AFTER THE FIRST 1000 MILES OF SERVICE AND PERIODICALLY INSPECT FOR PROPER TORQUE AND SOUNDNESS OF THE ENTIRE BOX INSTALLATION EVERY 90 DAYS OR LESS. IF DURING INSPECTION A DISCOVERY OF DAMAGED PARTS, CRACKS IN ANY PART OF THE UNIT, OR A FAILURE OF ANY PART OF THE UNIT IS DISCOVERED THE OPERATOR IS TO IMMEDIATELY REPLACE THE DISCOVERED PROBLEM.