

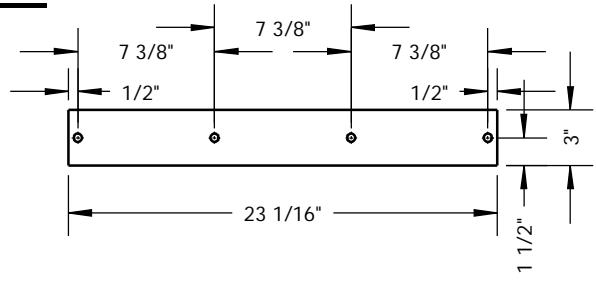


BATTERY MOUNT 8 BOLT KIT INSTRUCTIONS

SIX PACK BOX

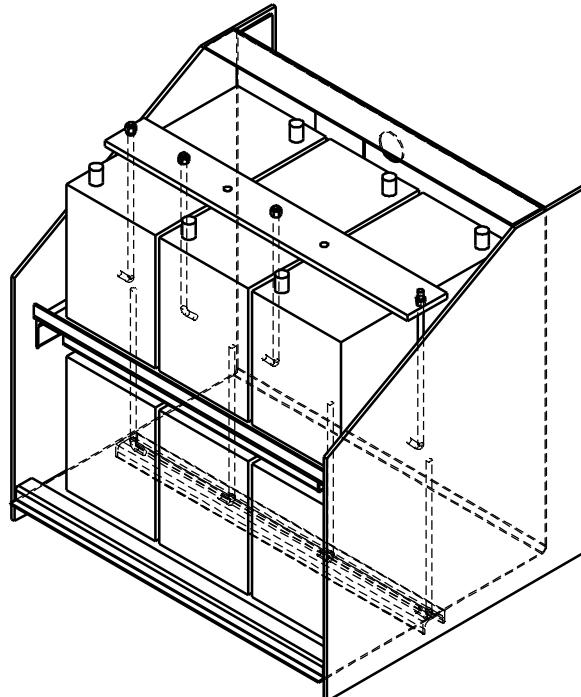

- 1) DRILL 3/8" HOLES IN UHMW STRAPS IN LOCATIONS SHOWN.
- 2) MATCH DRILL 3/8" HOLES THROUGH THE CHANNEL IN THE BOTTOM OF THE BOX. POSITION SHELF ON ANGLES AND MATCH DRILL HOLES THROUGH THE ANGLES ALSO.
- 3) INSTALL LOWER BATTERIES.
- 4) SET A UHMW STRAP ON TOP OF THE BATTERIES AND RUN L-BOLTS UP THROUGH THE HOLES THAT YOU DRILLED IN THE LOWER CHANNEL AND THROUGH THE STRAP.
- 5) INSTALL WASHERS AND NUTS ONTO L-BOLTS AND TIGHTEN SECURELY.
- 6) POSITION TOP SHELF ON THE ANGLES.
- 7) SET BATTERIES ON SHELF.
- 8) SET A UHMW STRAP ON TOP OF THE BATTERIES AND RUN THE 2 OUTSIDE L-BOLTS UP THROUGH THE HOLES THAT YOU DRILLED IN THE ANGLES AND THROUGH THE STRAP. THESE L-BOLTS WILL HOLD THE SHELF IN PLACE.
- 9) INSTALL CENTER BOLTS THROUGH THE SHELF AND STRAP.
- 10) INSTALL WASHERS AND NUTS ONTO L-BOLTS AND TIGHTEN.

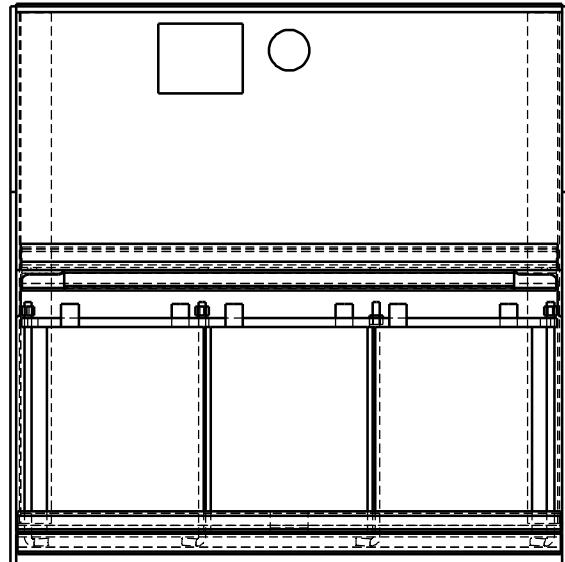

RECOMMENDED MAINTENANCE:
CHECK ALL MOUNTING BOLTS FOR PROPER TORQUE AFTER THE FIRST 1000 MILES OF SERVICE AND PERIODICALLY INSPECT FOR PROPER TORQUE AND SOUNDNESS OF THE ENTIRE BOX INSTALLATION EVERY 90 DAYS OR LESS. IF DURING INSPECTION A DISCOVERY OF DAMAGED PARTS, CRACKS IN ANY PART OF THE UNIT, OR A FAILURE OF ANY PART OF THE UNIT IS DISCOVERED THE OPERATOR IS TO IMMEDIATELY REPLACE THE DISCOVERED PROBLEM.

D	8	11-2010	NUT, LOCK 5/16-18 ZINC NC NYLON	
C	8	11-0099	BOLT, BATTERY "L" 5/16-18 x 10.5	
B	2	87-4150-249	UHMW, STRAP 3/8" x 3" x 23 1/16"	
A	8	11-7035	WASHER, FLAT 5/16 SAE ZINC	
REVISION	LTR	DATE	DESCRIPTION	BY
				SCALE: NONE
				DWN BY: TPK
				REF # 3516
				WEIGHT
				TITLE KIT, BATTERY MOUNT 6 BOLT INSTRUCTIONS
				DATE 7/1/16 DWG LSRSD0107 REV A

MERRITT MERRITTPRODUCTS.COM
ALUMINUM PRODUCTS COMPANY
1011 14TH ST.
FORT Lupton CO. 80612